

Tools Needed

- Casement Wrench (specialty wrench available at your dealer or distributor)

OR

- 7/16" Open-end Wrench and Screwdriver

STEP 1



Remove the screen from the inside.

STEP 2



Examine the margin between the sash and the frame. If there is an uneven margin or gap, this can be evened out by adjusting the hinge arm.

STEP 3



Unlock the window and open the sash about halfway.

STEP 4



Place the sash wrench under the hinge on the hinge post. Moving the post to the right moves the sash to the right. Moving the post to the left moves the sash to the left.

STEP 5



NOTE: If you don't have a sash wrench, you can use a standard screwdriver and a 7/16" open-end wrench. (Remove the hinge arm with the screwdriver for access to the hinge arm post).

STEP 6



Close the sash and reexamine the margin. If there is still a gap, additional adjustments may be required.