

# Inovo® Top Hung Screen Installation Instructions

## 1. Remove Screen Stop

(a screwdriver is recommended) Insert tip of screwdriver in open end of screen stop and rotate downward (Fig 1). *NOTE: If the door is assembled, the stop will be installed. If the door frame is not assembled and the screen stop is packaged in the handle box, proceed to Step 2.*

## 2. Install Rollers on Track

- Align the screen top rollers with the two openings in the top of the roller track. Use the exterior screws as a guide. (Fig 2 & 3).
- Insert the top of the screen into the frame as far as possible (Fig 4).
- At the same time, swing the bottom of the screen outward and slide the screen over to the center of the door.
- Next, use your finger or a putty knife to push up the bottom roller wheel (Fig 5), while positioning the screen so the roller can fully engage on the sill. Position the roller wheels onto the sill track, making sure both ends are fully aligned. (Fig 6)
- Once aligned, roll the screen to ensure both roller wheels remain engaged.

## 3. Install or Replace Screen Stop

- Place the screen stop in the head at the end of the screen roller track (Fig 7).
- Screen stop should be fully seated into the head. Push stop fully into the jamb to allow for maximum screen opening.
- Stop will need to be removed prior to screen removal.

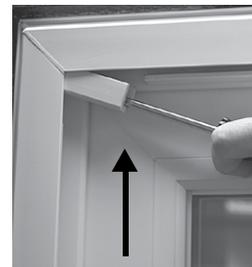


Figure 1

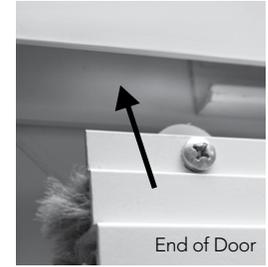


Figure 2



Figure 3



Figure 4



Figure 5



Figure 6



Figure 7



## Inovo® Top Hung Screen Installation Instructions

### 4. Screen Adjustment

Due to manufacturing tolerances and other factors, the Inovo patio door screen is designed with an ability to adjust the height. Primary adjustment is achieved by loosening or tightening the two screws.

- Loosen the two screws and lower the screen (Fig 8) until the bottom of the screen is approximately 1/4" – 5/16" from the sill. (Fig 9)
- Retighten the screws.
- In rare instances, further adjustments may be needed. Call 1-800-746-6686 to speak with a Simonton Tech for more information.



Figure 8

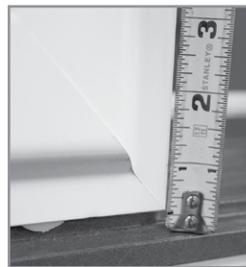


Figure 9



Figure 10

### 5. Screen Strike Installation

- After identifying the position and track direction of the latch, close the door into the frame and mark the estimated position in the screen pocket using the strike as template. (Fig 10).
- Pre-drill two 7/64" holes into the vinyl sill pocket (Fig 11).
- Install the strike over the holes using the screws provided (Fig 12). *NOTE: The correct orientation of the screen handle should require downward motion to disengage the keeper.*



Figure 11



Figure 12