

# J-CHANNEL FILLER ASSEMBLY INSTRUCTIONS FOR WINDOWS

Item #	Description	Quantity
1	Horizontal J-Channel Filler Piece	2
2	Vertical J-Channel Filler Piece	2

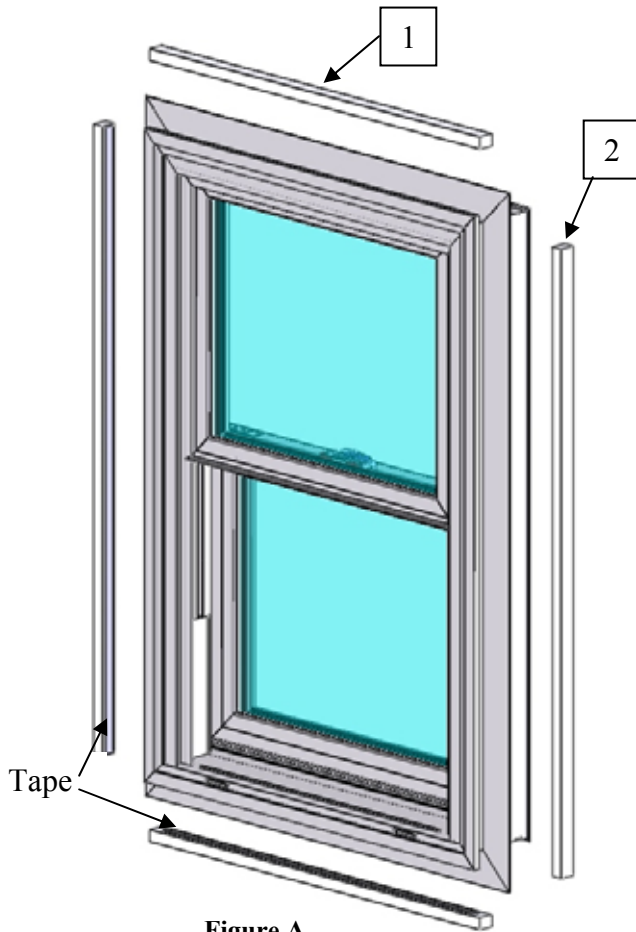


Figure A

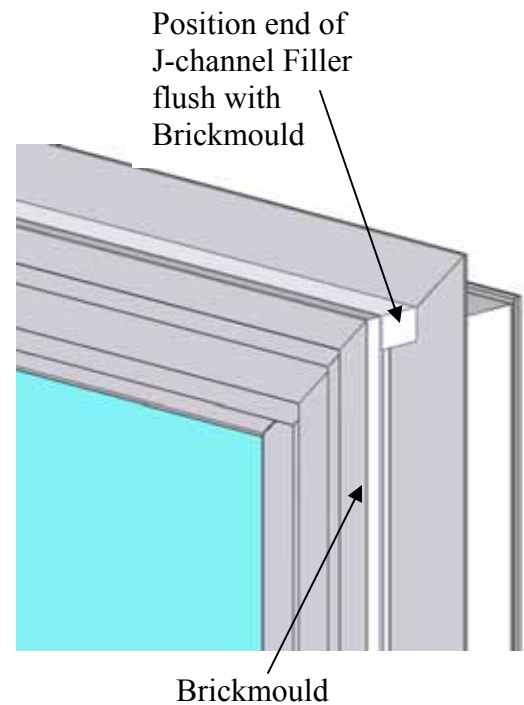


Figure B

**IMPORTANT:** READ THE INSTRUCTIONS AND FAMILIARIZE YOURSELF WITH THE PARTS AND PIECES BEFORE BEGINNING ASSEMBLY



**WARNING:** ENSURE THE WINDOW IS PROPERLY INSTALLED AND FLASHED

- Check to see that all the J-Channel Filler pieces are included. **NOTE:** If your unit is a twin or a triple mullled horizontally, you will need to use drip cap BM10203 (white) or BM10204 (driftwood) in place of the top J-Channel Filler piece
- Distinguish the horizontal pieces of J-Channel Filler from the vertical pieces by comparing their lengths to the overall window width and height. They will be close to the overall window dimensions
- Peel the backing from the tape on one horizontal piece of the filler. Place the filler in the J-channel at the top of the window, taking care to position the filler so that the ends are flush with the brickmould on the frame (Fig. B)
- Push the filler into the J-channel over its entire length to secure it to the frame
- Repeat with the second horizontal filler piece at the bottom of the window
- Peel the backing from the tape on the vertical filler pieces and position the pieces in the J-channels on the sides of the window. The ends of the vertical pieces will go between the horizontal pieces